www.invotecsolutions.co.uk - sales@invotecsolutions.co.uk



The FSML Water Flow Regulator




NEVER BEFORE SO SIMPLE

Easily and Quickly Mounted
Easily and Quickly Piped
Easily and Quickly Cleaned
Easily and Quickly Change Flow Rate

- * Improved quality of parts through precise water control,
- * Can be used with Ethylene & Propylene Glycol,
- * Quick and easy reproduce able settings when changing molds,
- * Heavy duty construction, long life,
- * Easy mounting on any make or model of machine,
- * Saves energy from faster startups,
- * Temp. gauge for each tube,
- * Flow tubes: Special polyamide nylon material (not polycarbonate) adjustable reference ring and contains brass float cone.

 Reference marks are molded-in, not printed on.

 Removes easily for cleaning

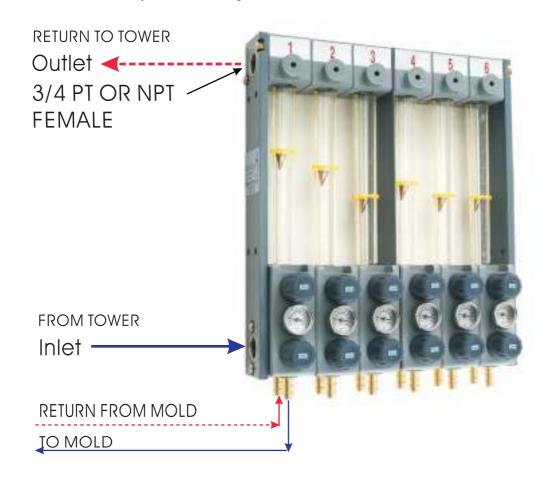

www.invotecsolutions.co.uk - sales@invotecsolutions.co.uk




INSTALLATION INSTRUCTIONS FOR **FSML** WATER FLOW METER

BENEFITS OF THE MODEL **FSML** WATER FLOW METER WATER FLOW REGULATOR


- A. ONE SIZE DOES ALL 4, 10, 20, L/MIN
- B. GLASS FILLED NYLON CONSTRUCTION, NO RUSTING OR CHEMICAL CORROSION
- C. EASILY CLEANING WITH REMOVE FLOW TUBE NUT & BRUSH CLEAN OUTSIDE
- D. NUMBERS OF ZONE CAN BE INCREASED OR REDUCED EASILY, REQUIRING NO SPECIAL TOOLS
- E. FLOW ZONE CONTROL KNOBS CAN BE LOCKED
- F. THERMOMETER IS STANDARD ON EACH ZONE
- G. FLOW INDICATOR IS STANDARD ON EACH ZONE
- H. TUBES ARE MADE FROM NYLON 12

HERE'S HOW IT WORK

- A. TOWER WATER ETC. IS PIPED TO WATER INLET (1).
- B. FLUID (2) FLOWS DIRECTLY TO MOLD THROUGH FITINGS.
- C. AFTER CIRCULATING THROUGH MOLD CHANNELS. FLUID IS DIRECTED UP SIGHT TUBE THROUGH FITTING 3 AND REGULATED BY CONTROL VALVE 4).
- D. FLUID IS THEN RETURNED TO TOWER, CHILLER OR TEMPERATURE CONTROLLER THROUGH OUTLET (5).

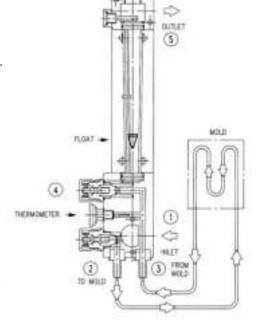

NOTE:
ALL MODELS CAN USED
SAFELY WITH ETHYLENE &
PROPYLENE GLYCOL

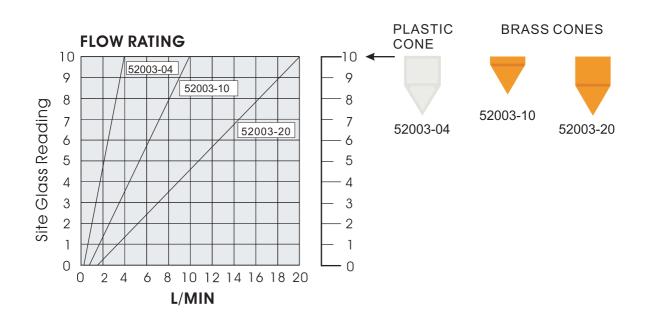


www.invotecsolutions.co.uk - sales@invotecsolutions.co.uk




INSTALLATION INSTRUCTIONS FOR **FSML** WATER FLOW METER

Piping

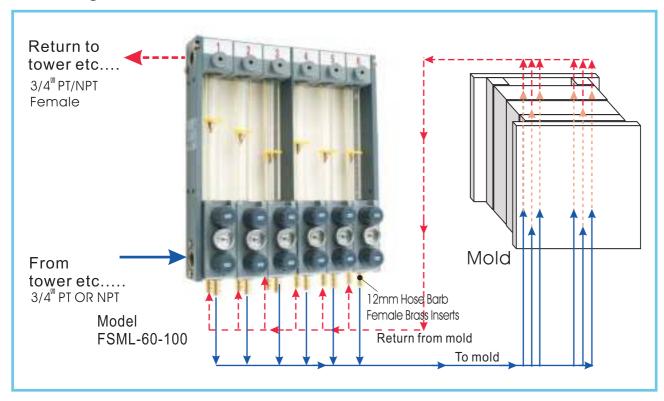


STANDARD MODEL * FSML- 20-040 * FSML- 20-100 FSML- 20-200 FSML- 30-040 * FSML- 30-100 FSML- 30-200 * FSML- 40-100 FSML- 40-200 FSML- 40-040 FSML- 50-200 FSML- 50-040 * FSML- 50-100 FSML- 60-040 * FSML- 60-100 FSML- 60-200 FSML- 80-040 * FSML- 80-100 FSML- 80-200 * FSML- 100-100 FSML- 100-200 FSML- 100-040 FSML- 120-040 * FSML- 120-100 FSML- 120-200

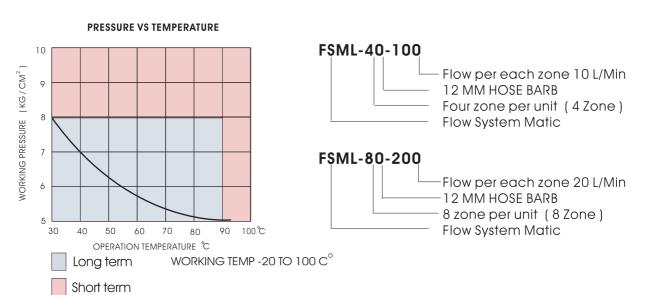



www.invotecsolutions.co.uk - sales@invotecsolutions.co.uk



Heavy duty construction for long life.

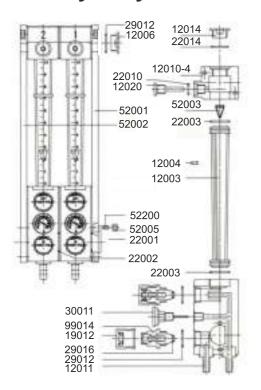


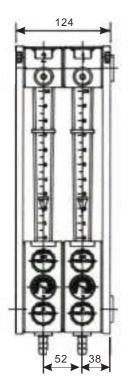

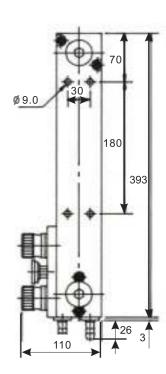

Part No.	Description	Part No. D	escription
12011 12010-4 12003 12003-30 12004 12020 12006	Lower Housing Upper Housing Sight Glass Sight Glass 30L Reference Ring Fixed Plug Plug 3/4"NPT	22005 29012 29016 30011 52001 52002 52200	O-Ring O-Ring Thermometer R.Side Plate L.Side Plate Screw
19012	Hand Wheel	52003	Float Cone
99014 22001 22002 22003 22004	Control Valve O-Ring O-Ring O-Ring O-Ring	12014 22010 52500 59061	Plug O-Ring Mid Plate Brush

MODEL	OVERALL SIZE Dmm Wmm Hmm			
FSML-20	125	110	422	
FSML-30	178	110	422	
FSML-40	228	110	422	
FSML-50	282	110	422	
FSML-60	333	110	422	
FSML-80	442	110	422	
FSML-100	545	110	422	
FSML-120	650	110	422	

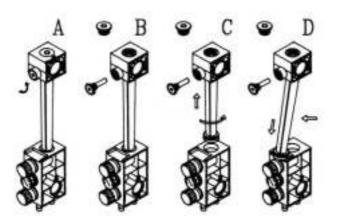

Operation Instructions Cleaning & Removal of Sight Glass

- A. Remove "Top Plug" & "Fixed Plug".
- B. To clean put Brush into Sight Tube through
 "Top Plug" hole Brush Up & Down.
 c. To Remove Sight Tube after carry out "C"
- Rotate Sight Tube 180 & push it up a short way.
- D. Now pull it down &out towards yourself.